

SPACE ONE WIRELESS


 



OWNER'S MANUAL



PORSCHE DESIGN
SOUND




In the Box

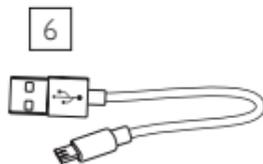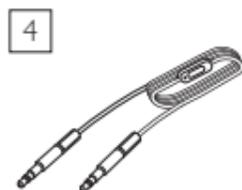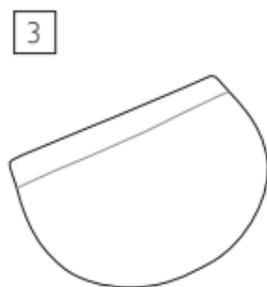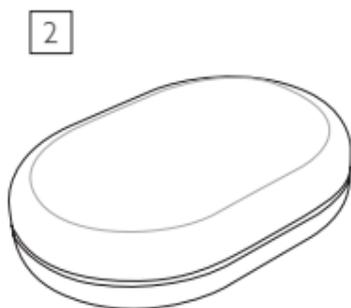

1	SPACE ONE WIRELESS
2	Carrying case
3	Accessory pouch
4	Audio mic cable
5	Airline adapter
6	USB charging cable


Headphones Overview

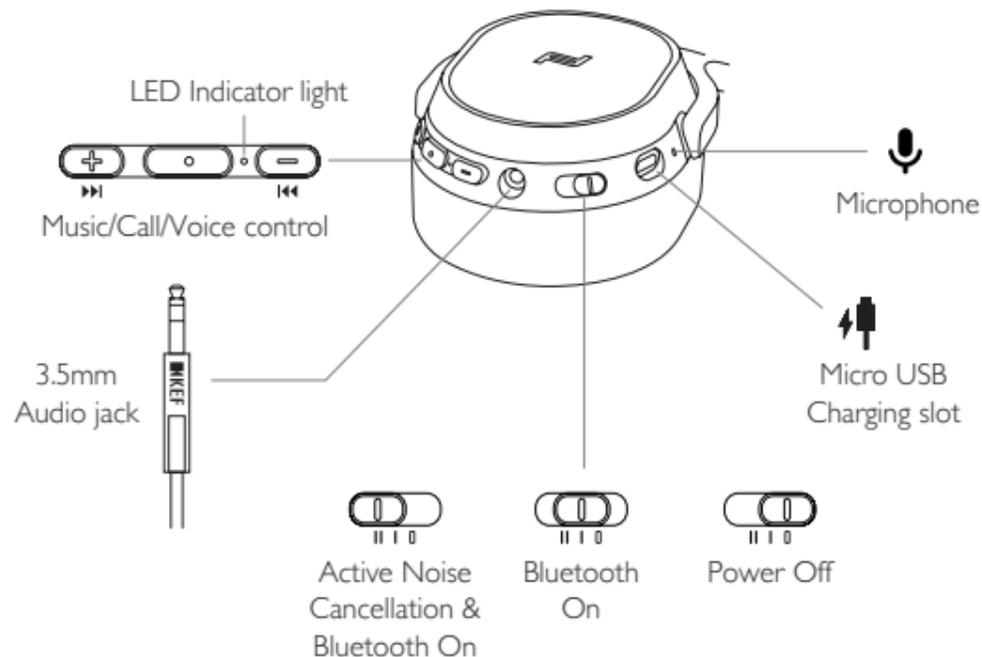

Get Started

Charge the battery

1. Plug the Micro USB end of the charging cable into the headphones charging slot.
 2. Plug the USB end of the charging cable into the charger or a USB port on a computer.
- * SPACE ONE WIRELESS is inoperable when charging.

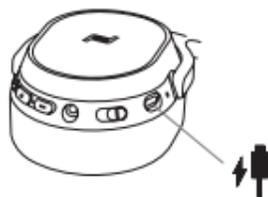


Enabling ANC (Active Noise Cancellation)

1. Slide the button to  to enable the ANC function
2. Slide the button to  to disable the ANC function

Pair the headphones with your phone

1. Slide the button to 
2. The blue LED will light up
3. Turn on the Bluetooth function on your phone

Get Started

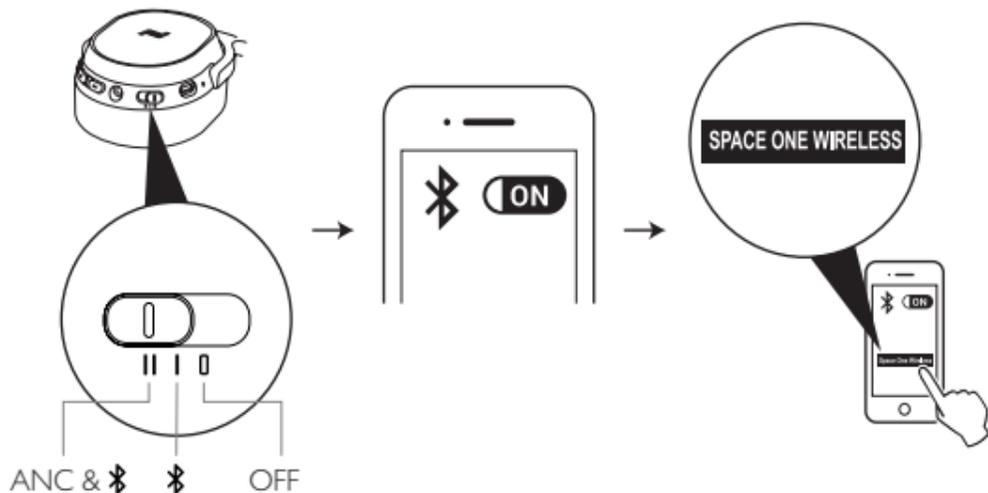

4. Your phone will start searching for SPACE ONE WIRELESS headphones
5. When paired, the blue LED will change to solid white
6. "Connected" will be heard in the headphones
7. The LED will flash blue and white for 5 seconds

Music/Call/Voice Control

Music Controls

	Function	Press button
	Play/Pause	Short press 
	Vol +	Short press 
	Vol -	Short press 
	Next track	Long press 
	Previous track	Long press 

Voice Controls

	Voice command	Long press 
---	---------------	---

Music/Call/Voice Control


Call Controls

	Function	Press button
	Accept / End call	Short press 
	Reject call	Long press 
	Accept incoming call(2) and hold ongoing call(1)	Short press 
	Accept incoming call(2) and end ongoing call(1)	Long press 
	Mute/ Unmute the mic	Long press 
	Transfer call to phone	Long press 

Voice Prompt


Function	Voice prompt
Power on	"Power on"
Power off	"Power off"
>80%	"Battery high"
<80%	"Battery medium"
<30%	"Battery low"
<10%	"Please charge"
Device connected	"Connected"
Device disconnected	"Disconnected"
Call muted	"Microphone off"
Call unmuted	"Microphone on"

Battery Status

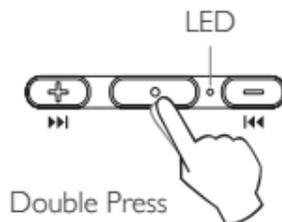

	Voice Prompt	LED
>80%	"Battery high"	--
<80%	"Battery medium"	--
<30%	"Battery low"	--
<10%	"Please charge"	Fast pulsing white

LED Indicator Light

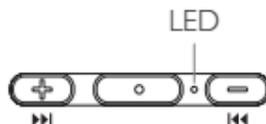

	LED indicator	Function
	Solid white	Charged full
	Slow pulsing white	Charging
	Fast pulsing white	Battery low

* *SPACE ONE WIRELESS is inoperable when charging*



	Solid white	Connected
	Blue pulsing LED	Pairing

* *Disconnect any connected device*

- Press  and  together and hold for 4 seconds to enter pairing mode

Corded Audio Mic Cable

- You may choose to use the included audio mic cable (i.e. when battery is low, when inflight, or to listen to high resolution audio)
- Insert the cable jack (KEF logo end) into the socket. To ensure the best connection, push until you hear a “click”, and the jack feels secure in the socket.
- After plugging in the audio mic cable, Bluetooth and button functions are disabled.
- Slide the button to  to enable the ANC function
- Slide the button to  to disable the ANC function

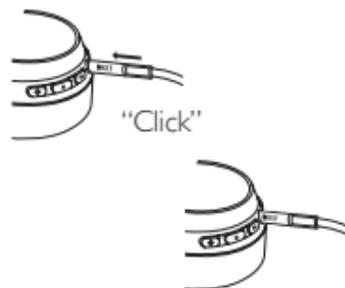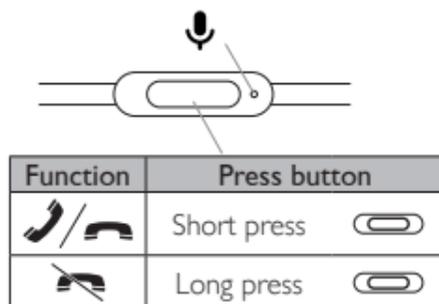

Specifications

Model	SPACE ONE WIRELESS
Speaker drivers	40mm
Frequency range	20-20000 Hz
Sensitivity	94dB
Impedance	16 Ω
Max power output	12mW
Bluetooth	4.1 with Qualcomm® aptX™
Bluetooth power	Class 2
Bluetooth range	10m
Bluetooth frequency	2.402-2.48 GHz
Li-ion rechargeable battery	850mAh
Battery play time	30hrs (BT on + ANC on) 40hrs (BT on + ANC off) 110hrs (ANC on + BT off)
Dimension (H x W x D)	195 x 170 x 82 mm
Weight	330g
Power input	DC 5V 600mA

For further information and troubleshooting, please visit KEF website: KEF.COM

KEF reserve the right, in line with continuous research and development, to amend or change specifications without prior notice. E. & O.E

SOUND BY KEF, MAIDSTONE, U.K.
GP Acoustics (UK) Limited
Eccleston Road, Tovil, Maidstone
Kent, ME15 6QP UK



KEF.COM

Issue 2: 12.2017